



**motorola** W208/W209



**MOTOSTART**

Actual color of handset may be different from illustration. Please check with your local retailer for handset color availability.



# get started

*install SIM card & battery*

1



2



3



4



5



6



# get started

## *charge battery*

New batteries are not fully charged. To charge your phone's battery, plug the battery charger into your phone and into an electrical outlet.




When charging is finished, your display shows **Charge Complete.**

For tips on battery life and charging, see the panel after "text messages."


# get started

## *turn phone on & off*

**Press and hold**  for a few seconds, or until the display turns on or off.



## *make a call*

Enter a phone number and press .



## *answer a call*

When your phone rings and/or vibrates, press .



## *end a call*

Press .



# basics

## *introducing your phone*




**Note:** Your phone may not appear exactly as the phone image in this picture; however, all key locations, sequences, and functions are the same.

# basics

## *menus*

- ❶ Press  to open the **Main Menu**.



- ❷ Press  up, down, right, & left to highlight a menu option.




- ❸ Press **SELECT** to select the highlighted option.



# basics

## *emergency calls*

### **To call the emergency number:**

Press keypad keys to enter the emergency number, then press  to call it.



Your service provider programs one or more emergency phone numbers (such as 112 or 911) that you can call under any circumstances, even when your phone is locked or the SIM card is not inserted.

**Note:** Emergency numbers vary by country. Your phone's preprogrammed emergency number(s) may not work in all locations. Sometimes an emergency call cannot be placed due to network, environmental, or interference issues.



# basics



## *voicemail*

**Find it:** Press  >  Messages > Voicemail

## *recent calls*

**Find it:** Press  >  Recent Calls

## *lock your keypad*

 
Press , then  (within 2 seconds) to lock or unlock your keypad (to prevent accidental key presses).

**Note:** You can still make emergency calls on your phone when the keys are locked.

# basics

## *status indicators*

Status indicators show at the top of the home screen:

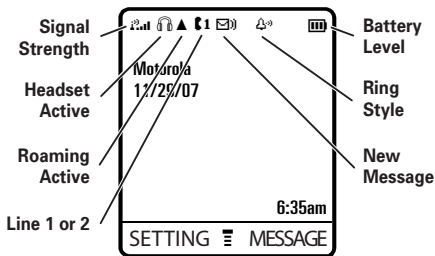

# basics



## Messages \*

- New Message
- Voicemail
- Text Msgs
- Info Services
- Quick Notes
- Outbox
- Drafts



## Contacts



## Recent Calls

- Received Calls
- Dialed Calls
- Notepad
- Call Times \*
- Call Cost \*



## Games



## Extras

- Calculator
- MyMenu
- Alarm Clock
- Datebook
- Stop Watch
- Lantern
- Quick Dial \*
- Fixed Dial
- Service Dial



## Ring Styles

- Style
- Ring Detail
- My Tones



## Settings

- Call Divert \*
- Phone Status \*
- In-Call Setup
- Security
- Initial Setup
- Network \*
- Headset



## FM Radio

(plug in headphones)



## Personalise

- Home Screen
- Main Menu
- Color Style
- Greeting
- Wallpaper
- Screen Saver
- Quick Dial \*

\* Network and/or subscription dependent features



The function available on this handset may vary in different regions and nations. Please contact your local customer service centers, agencies or retailers if you have any questions about the handset function. Motorola reserves all rights to revise and change this user's manual without obligation to notify any person of such revision or changes.


The above gives an example of typical structure of main menu. Please refer to the handset for the actual structure.

# customise

## *change ring styles*

### **To change ring volume:**

**Find it:** Press  >  Ring Styles > Ring Detail

- 1 Scroll to **Ring Volume** and press **Change**.
- 2 Press  right or left to raise or lower volume.

### **To change ring style:**

**Find it:** Press  >  Ring Styles > Style

Scroll to the style you want and press **Select**:

 Loud Ring

 Soft Ring

 Vibrate

 Vibe and Ring

 Vibe then Ring

 Silent

# customise

## *set screen saver*

**Find it:** Press  >  Personalise > Screen Saver > Picture

Scroll to an image and press **Select**.

### TIP

This feature helps save your screen, but not your battery. To extend battery life, turn off the screen saver.

## *set wallpaper*

**Find it:** Press  >  Personalise > Wallpaper



Scroll to an image and press **Select**.

# FM radio

## *listen to radio*


- 1 Plug a 2.5mm headset into your phone.

**Note:** The headset also acts as an antenna, so the FM Radio receiver performance is dependent on the type of headset device connected. If a non-Motorola 2.5 mm headset is connected to the phone through the adapter (2.5 - 3.5 mm), or the headset is curled up or kinked, performance may be affected.

- 2 Press  >  FM Radio.
- 3 Press **ON** (the left soft key).

**To tune in a station,** press  left or right.

**To scan available stations,** hold  left or right.

**To adjust volume,** press  up or down.

To turn the radio off, press **FM RADIO** or unplug the headset.

# FM radio

## *store favorite stations*

You can store up to nine FM stations as radio presets.

When listening to a station, **press and hold** a number key **1** through **9** to store the station as a preset.

To select a preset station, press the number key **1** through **9** for the station you want.

# contacts

## *store contacts entry*

- ❶ Enter a phone number from the home screen.
- ❷ Press **STORE**.
- ❸ Press **CHANGE** to open the **Name** entry area.
- ❹ Enter a name for the new contacts entry.
- ❺ Press **DONE** to store the entry.

## *call contacts entry*

**Find it:** Press  >  **Contacts**

Scroll to the entry you want to call and press .




# text messages

## *send a text message*

**Find it:** Press  >  **Messages** > **New Message**

- 1 Type the message and press **OK**.
- 2 In the **To** screen, enter the number you want to send to using the keypad keys and press **OK**.

Press  to switch text entry mode to iTAP™ (predictive text entry), Tap Extended, Numeric, or Symbol.

 
- 3 If you want a delivery receipt, scroll to **Receipt:** and press **CHANGE**. Scroll to **Yes** and press **CHANGE**, then press **DONE**.
- 4 Press **SEND** when ready to send the message.

# text messages

## *enter text*

You can enter text for text messages:

*Flashing cursor*  
indicates  
insertion point.

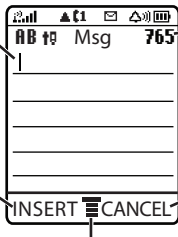

*Character  
counter*

Press **INSERT**  
to insert a  
quick note.

Press  to open  
sub-menu.





Press **CANCEL**  
to exit without  
saving any  
changes.

*continued*




# text messages

 

Press  to switch text entry modes:

-  **iTAP:** Press each letter's key once, then choose from the words your phone suggests.
-  **Tap:** Press each letter's key repeatedly, until the letter appears.
-  **Numeric:** Enter numbers only.
-  **Symbol:** Enter symbols only.

## *read a text message*

When you receive a new text message, your phone shows **New Message** and the  indicator.

To see **received** messages:

**Find it:** Press  >  **Messages** > **Text Msgs**

To see messages you have sent:

**Find it:** Press  >  **Messages** > **Outbox**

# accessories



Vehicle Power  
Adapter



Hands-Free  
Headset



One-Touch Stereo  
Headset

6802932J03